



Care and use instructions

CAUTION


- Not for use with hot, carbonated, pulpy or perishable beverages.
- Not intended for children under 3 years of age.
- DO NOT microwave or freeze.
- DO NOT use cleaners containing bleach, chlorine, abrasives and/or other harsh chemicals.
- DO NOT continue to use if damaged.

USAGE RECOMMENDATIONS



CLEANING INSTRUCTIONS

- Wash thoroughly before first use.
- Flip open the lid interior before rinsing or washing.

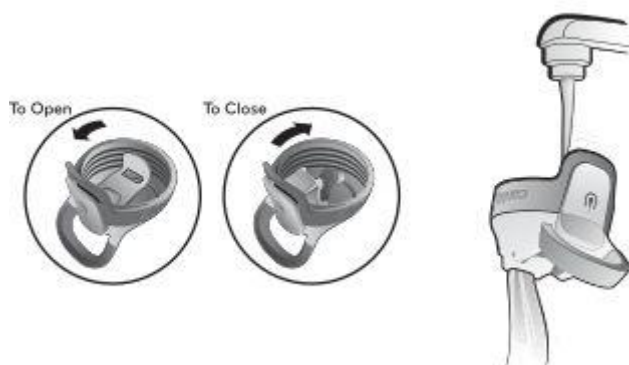


- RINSE LID IMMEDIATELY AFTER EACH USE with warm water, pressing the AUTOSEAL® button so water flows through drink spout and vent hole.
- Lid and plastic body are top-rack dishwasher safe.
- If washing by hand, soak lid for 10 minutes in hot, soapy tap water. Hand wash body with warm water and a mild detergent. Rinse both lid and body thoroughly before use.

Copyright © 2015 **contigo**, All rights reserved.

Kambukka bvba | Torenplein 7.16.1 | 3500 Hasselt | Belgium

contigo®

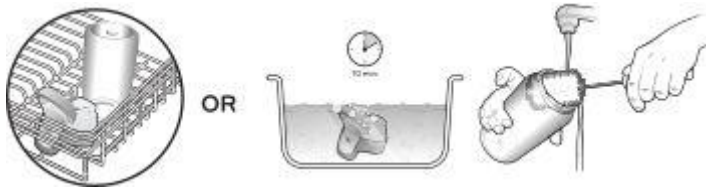

- ALWAYS STORE BOTTLE WITH LID REMOVED to allow parts to dry completely.