



Care and use instructions

CAUTION

- Not for use with hot, carbonated, pulpy or perishable beverages.
- Do not microwave or freeze.
- Do not use cleaners containing bleach, chlorine, abrasives and/or other harsh chemicals.
- Check product regularly for proper function and replace immediately if damaged.

USAGE RECOMMENDATIONS



TO OPEN




TO CLOSE



SQUEEZE TO
DRINK



RELEASE TO
SEAL

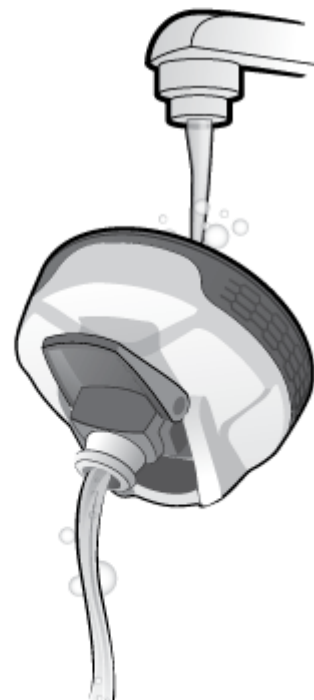



CLEANING INSTRUCTIONS

- Wash thoroughly before first use.
- RINSE LID IMMEDIATELY AFTER EACH USE with warm water and spout in the open position so water flows through.
- Then wash lid in top rack of dishwasher, or soak lid for 10 minutes in hot, soapy tap water. Rinse thoroughly.
- Lids and bodies are “Top Rack Dishwasher Safe” and can also be hand washed with warm water and mild detergent and then rinsed thoroughly.

