

## Care and use instructions

### CAUTION

- Not for use with hot, carbonated, pulpy or perishable beverages.
- Not intended for children under 3 years of age.
- Do not microwave or freeze.
- Do not use cleaners containing bleach, chlorine, abrasives and/or other harsh chemicals.
- DO NOT overfill. Fill liquids to just below the threading in the body.
- DO NOT microwave or freeze.
- DO NOT use cleaners containing bleach, chlorine, abrasives and/or other harsh chemicals.
- DO NOT continue to use if damaged.


### CLEANING INSTRUCTIONS

- Wash thoroughly before first use.
- RINSE LID IMMEDIATELY AFTER EACH USE with warm water, pressing the AUTOSEAL® button so water flows through drink spout and vent hole.




- Then wash lid in top rack of dishwasher, or soak lid for 10 minutes in hot, soapy tap water.
- Bodies are top-rack dishwasher safe and can also be hand washed with warm water and a mild detergent and then rinsed thoroughly.

# contigo®

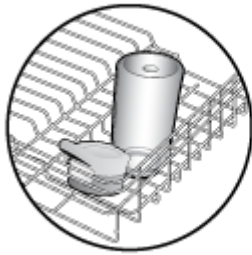

OR

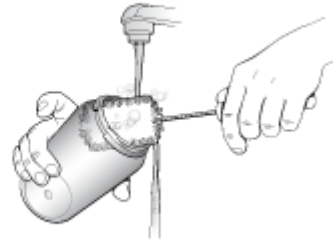

- ALWAYS STORE PRODUCT WITH LID REMOVED and spout in open position to allow parts to dry completely.

PRESS BUTTON  
to sip



TIP  
to drink



RELEASE BUTTON  
to Automatically Seal

